

# Water Pump

Sl.No	Item	Part No	Sl.No	Item	Part No
1	CASING	10120180	26	RETAINER	10191033
2	FRAME BEARING	10120191	27	CAP SCREW	15043095
3	IMPELLER	10124664	28	MODIFIED DRIVE GEAR	10142873
4	SHAFT	10210246	29	LOCKING NUT	10220124
5	NAME PLATE	10250049	30	CAP SCREW	15043060
6	PIPE PLUG	11291722	31	KEY	15312173
7	KEY	15311090	32	LOCK WIER	15330369
8	SLEEVE ( IMPLLER )	10210866	33	DRIVE SCREW	15260010
9	WASHER	10210192	34	EYE BOLT	10140128
10	CASTELLATED NUT	15380166	35	CASING ( MG)	10120970
11	COTTER PIN	15323134	36	IMPELLER (MG)	10122941
12	SEAL	10170844	37	GEAR	10140505
13	SEAL PLATE	10120208			
14	GASKET	10170297			
15	GASKET	10170110			
16	BEARING	10175880			
17	SLINGER	10240263			
18	SLINGER HUB	10170728			
19	BEARING ( IMPELLER END )	10150262			
20	SLEEVE ( BEARING )	10212693			
21	STUDS	15132134			
22	ELASTIC STOP NUT	15363120			
23	STUDS	15113176			
24	ELASTIC STOP NUT	15363144			
25	BEARING ( GEAR END )	10150171			

# Over Speed Trip With Cam Shaft Vibration Damper.

Sl.No	Item	Part No	Sl.No	Item	Part No
1	SPRING	10160152	29	LOCK PLATE	10180011
2	SPRING	10160206	30	STRAIGHT DOWEL	15284177
3	LOWER HOUSING	10120099	31	SPRING SEAT	10210155
4	SPECIAL L- SCREW	10120362	32	CARRIER	10210910
5	LEVER ARM	10130172	33	SPRING RETAINER	10220010
6	SCREW	10210556	34	FLEXLOCK NUT	15380087
7	SPRING	10160012	35	CROVER	10120087
8	STUD BOLT	10211044	36	SPIDER	10210921
9	TRIP LEVER	10050190	37	RETAINER	10130044
10	SPECIAL SCREW	10220057	38	OUTER RING	10130068
11	SPRING	10160024	39	THRUST PLATE	10190569
12	DOWEL PIN	10240330	40	THRUST BEARING	10130019
13	ASSLY. HENDLE LEVER SHAFT	10051960	41	SHIM	10240639
14	SHAFT ASSEMBLY	10210652	42	GASKET	10170285
15	HANDLE	10124482	43	STRAIGHT DOWEL	15285170
16	SCREW	15250039	44	OIL SEALS	10170777
17	BEARINGS	TPE030001-4	45	SHAFT SPACER	10210428
18	SPRING COVER	10120117	46	UPPER HOUSING	10120105
19	GASKET	10170030	47	TORSION SPRING	10160140
20	OIL SEALS	10170765	48	SPIROL PINS	15330280
21	TAPER DOWEL	10240287	49	HEX.HEAD CAPSCREW	TPE130044
22	SHAFT	10210386	50	COTTER PIN	15321083
23	GASKET	10170066	51	SPECIAL SCREW	10220100
24	HANDLE	10121936	52	GASKET	10170649
25	PLUNGER	10210787	53	CAP SCREW	15043060
26	NUT	1P65000	54	HEX.BOLTS	15090176
27	TAPER DOWER	10240299	55	HEX. BOLTS	15032346
28	SPIRAL PIN	15330230	56	SQ.HEAD PIPE PLUG	11290729

# LUB OIL PUMP (MODIFIED) HERRING BONE TYPE GEAR

Sl.No	Item	Part No
1	DRIVE GEAR	10142861
2	LOCK NUT	10220124
3	CAP SCREW	15043060
4	LOCK WIRE	15330369
5	BACK PLATE	10123660
6	STUD	15114521
7	STUD	15114200
8	LOCK NUT	15363168
9	CASING	10122837
10	FACE PLATE	10123659
11	GASKET	10170080
12	GASKET	10170091
13	STR. DOWEL	15292174
14	DRIVE SHAFT & IMPELLER ASSLY.	10063067
15	FLANGED BRG. BUSHING	10130070
16	FLANGED BRG. BUSHING	10130081
17	IMPELLER FOLLOWER SHAFT ASSY	10063079
18	FLANGED BRG . BUSHING	10131700
19	NAME PLATE	10250037
20	DRIVE SCREW	15260010
21	KEY	15315034
22	FLANGED BRG. BUSHING	10131711

# Fuel Pump Control Lever Double Spring.

Sl.No	Item	Part No	Sl.No	Item	Part No
1	CONTROL SHAFT R.S FREE END	10210600	28	SPRING LOCK WASHER	15396113
2	CONTROL SHAFT R.S GEN END	10210660	29	PIN FOR ECCENTRIC MACH	10130159
3	CONTROL SHAFT L.S FREE END	10210647	30	SPECIAL NUT ( FCS OIL	10190181
4	CONTROL SHAFT L.S GEN END	10210623		SEAL GEN END	
5	CONTROL SHAFT R.S FREE END	10212577	31	ECCENTRIC FP SUPPORT	10210040
6	CONTROL SHAFT L.S GEN END	10212589	32	CAP SCREW SOC HD	15083093
7	CONTROL SHAFT L.S FREE END	10212607			
8	CONTROL SHAFT L.S GEN END	10212590			
9	CONTROL SHAFT FREE END	10211585			
10	CONTROL SHAFT GEN END	10211561			
11	ASSEMBLY BRACKET & BUSHING	10052070			
12	COUPLING CONTROL SHAFT	10210570			
13	SPRING LEVER (CONT.SHAFT TO ECC LEVER )	10120671			
14	TORSION SPRING FP CONT LEVER	10160103			
15	SPRING RETAINER	10210167			
16	SPIRAL PIN	15330254			
17	SPIRAL PIN	15330242			
18	SPIRAL PIN	15330230			
19	COTTER PIN	15321083			
20	TAPER PIN SLOTTED	15299170			
21	DOG FPCS	10210568			
22	LEVER FOR ECC ADJUST MACH.	10140300			
23	OIL SEAL RETAINER (FCS GEN END)	10190545			
24	SLEEVE FP CONT SHAFT MACH	10130160			
25	COLLAR FP CONT SHAFT	10210519			
26	SOC SCREW CUP POINT	15251020			
27	SOC SET SCREW CUP POINT	15250015			

# LUB OIL PUMP (MODIFIED)

Sl.No	Item	Part No
1	DRIVE GEAR	10140426
2	LOCK NUT	10220124
3	CAP SCREW	15043060
4	LOCK WIRE	15330369
5	BACK PLATE	10123660
6	STUD	15114521
7	STUD	15114200
8	LOCK NUT	15363168
9	CASING	10122857
10	FACE PLATE	10123659
11	GASKET	10170080
12	GASKET	10170091
13	STR. DOWEL	15292174
14	DRIVE SHAFT & INPELLER ASSLY.	10061277
15	FLANGED BRG. BUSHING	10130070
16	FLANGED BRG. BUSHING	10130081
17	IMPELLER FOLLOWER SHAFT ASSY	10062038
18	FLANGED BRG . BUSHING	10131700
19	NAME PLATE	10250037
20	DRIVE SCREW	15260010
21	KEY	15315034
22	FLANGED BRG. BUSHING	10131711

# Water Pump / RB-LB (EMD)

Sl.No	Item	Part No	Drg. No	Sl.No	Item	Part No	Part No
1	HOUSING SUPPORT	16120929	8329900	26	SPRING	16160344	8055346
2	HOUSING	16120930	40004233	27	SEAL RETAINER ASM	16070161	9529473
3	GASKET	16170635	8209776	28	PLUG	17300058	8348618
4	IMPELLER	16122008	8248248	29	BOLT	19014417	179884
5	NUT	19355191	8028724	30	WASHER	19390040	103323
6	WASHER	19391158	8028730				
7	KEY	19310092	103909				
8	BOLT	19011180	9543448				
9	SLINGER WATER	16240376	8042969				
10	BEARING - OUTER	16150405	908415				
11	PIPE	16230292	9532762				
12	BEARING - INER	16150417	908410				
13	RING RETAINING	19340199	8042297				
14	SNAP RING	19340205	8370886				
15	SHAFT WATER PUMP	16240388	8052246				
16	GEAR	16141209	8042976				
17	KEY WOODRUFF	19310109	108627				
18	WASHER SPECIAL	19394044	8042977				
19	NUT	19354034	8032724				
20	SELING COMPOUND	18540090	8366747				
21	SCREW	19260039	145372				
22	BUSHING	16150429	8052224				
23	GASKET	16170570	9570647				
24	SEAL	16170647	9529199				
25	SEAL	16241459	9526863				